



## Boumatic Gascoigne Melotte.



**XP ACR.**

**USER CHART**



### **To go Milking.**

*Change Milk / Wash Switch to Milking Position.( Vac. Pump on.)*

*Clusters will lift up into Standby Position.(Cluster Hanging from ACR Rope.)*

*Lift Cluster,ACR gives you Cluster with Vacuum.(Attach to Cow)*

*Or 1 Press to **Green Button** gives you Cluster with Vacuum.(Attach to Cow)*

*1 press to **Black Button**while on Cow = Manual Mode.*

*1 press to **Black Button** again while on Cow = Back to Automatic Mode.*

*Long press to **Black Button** (3 seconds) while on Cow = Manual Take Off.*

### **To go Washing.**

*Cluster in Standby Position.(Cluster Hanging from ACR Rope.)*

*Long press (3 seconds) on **Black Button** Will let down cluster with no Vacuum.*

*Clusters can now be placed in Jettors.(this can be done while the last few cows are milking on the other units.)*

*Place all Clusters in Jettors.*

*Change Milk / Wash Switch to Washing Position.  
(Clusters will Start suction ready for Washing.)*

**Always Leave Milk/Wash Switch in Wash when not Milking.**

