
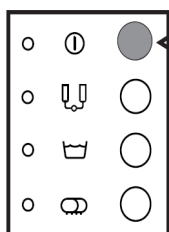


C200 Plant Washers

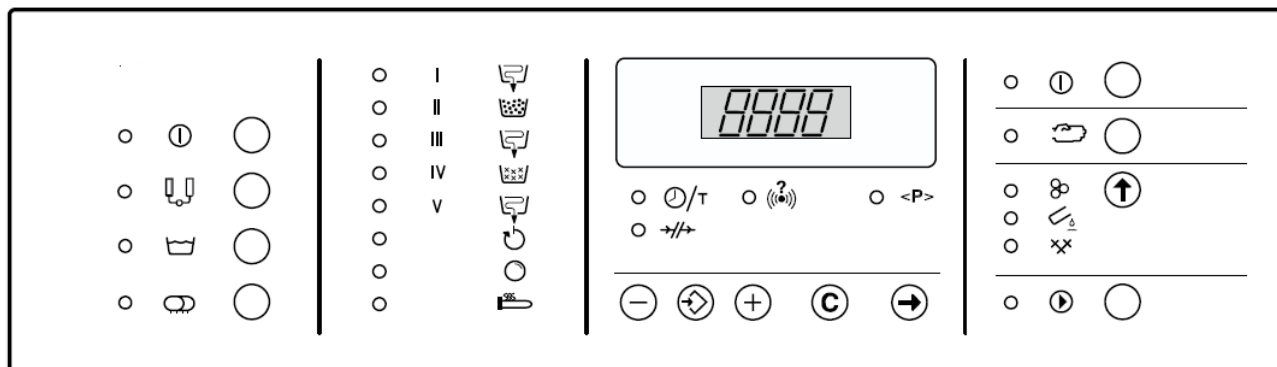

Always ensure the top power button is on button (green LED should be lit)

Milk button

Wash Button


Not Used

Milking

1. Ensure there are no wash alarms (red flashing led below the clock) if so clear these and check the alarm sheet.
2. Remove the pipe from the wash position and put it into the Tank or tank fill valve are in the correct position
3. Press the Milk Button (to start the Vacuum pump etc)

Washing

1. Pump and or purge any remaining milk from the milk receiver.
2. Push the Milk Button again to stop the milking process.
3. Remove the pipe from the tank and put it into the wash position or put the tank valve out of the wash position and into the milk position.
4. Press the wash button the wash cycle should start ensure the units are all washing before leaving the parlour.

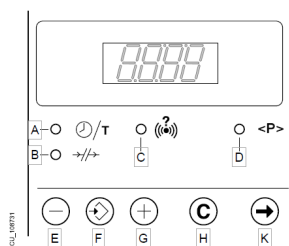

A: Time

B: Bus error

C: Alarm

D: Program

E: Decrease

F: Store

G: Increase

H: Clear

K: Select