


User Instruction Chart

MIIIβ Control

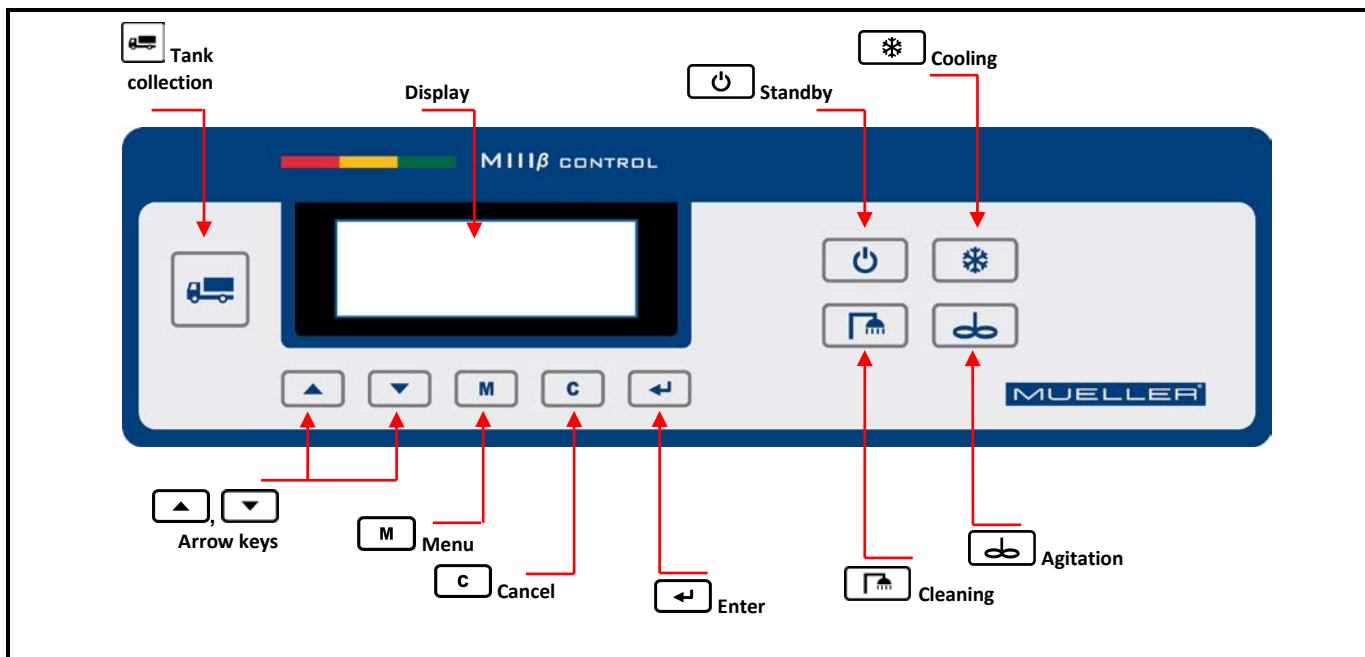

Cooling First milking	<ol style="list-style-type: none"> 1. Check that the tank is properly cleaned 2. Close the outlet valve 3. Press to start cooling program 4. Fill the tank with milk 5. Immediately after milking: check that the condensing unit and agitator are running
Next milkings	<ol style="list-style-type: none"> 6. Press again, for a quick start-up of the cooling programme (deep cooling)
Cleaning	<ol style="list-style-type: none"> 1. Check the levels of the detergent 2. Check that the outlet valve is open 3. Check that the cover is on the outlet valve 4. Check that the manhole cover is closed 5. Press to start the cleaning programme. <ul style="list-style-type: none"> • The display will show the remaining cleaning time 6. After the cleaning process, manually clean the manhole cover, ring and edge with a solution of warm water and detergent 7. Regularly check that the spray pipe and the spray head(s) are not blocked
Emptying	<ol style="list-style-type: none"> 1. Refer to Milk collection instruction
Dealing with alarms	<ol style="list-style-type: none"> 1. Press to accept the new alarm 2. Repeat step 1 until all alarms have been accepted and the bleeper is off. (refer to Chapter 8 of the user manual for an overview of all possible failures and how to remedy)
General	<ol style="list-style-type: none"> 1. Regularly check the milk temperature 2. Never press when cooling is not required 3. Emergency Stop: turn the main switch on the switch box into the "0" position 4. Put this instruction card in the immediate vicinity of the tank