


# Dematron 75 Parlour Information Sheet

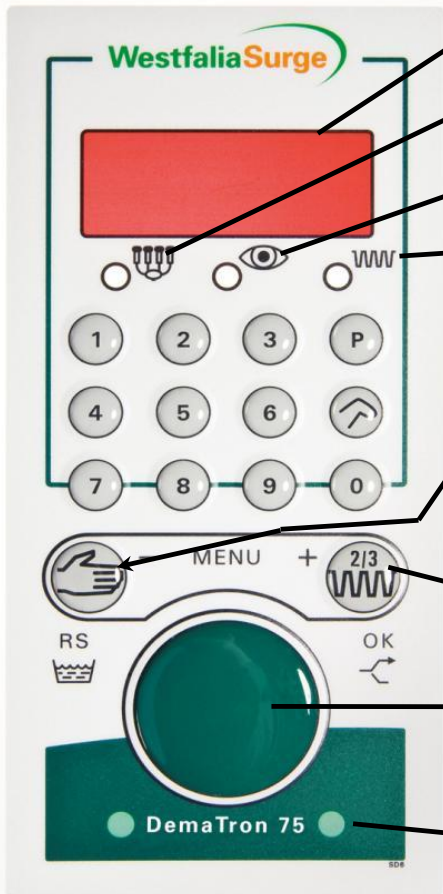

- LED Display
- Manual milking indicator
- Milk flow indicator
- Pulsation/Stimulation indicator
- Manual milking
  - Restart
  - Rinse
  - Hold button to lower all clusters for washing-optional
- Cow Selection OR
  - Change Stimulation

## START / STOP

Hold button to lift all clusters at start-up - optional

Indicator Lamp

??	Unknown Animal No.	-A-	Calendar Heat
1.1.	Cow number entered more than once this milking	-AA-	High Activity
--A-	Low Milk Alarm	-E-	High Feed Remainder
-[.-.	High Conductivity	70f	Colostrum /Antibiotic
-nF-	Illogical Milking e.g. no milk letdown	000	Antibiotics
A1.	Milk Control Signal A	0°0	Dry Animal
b1.	Milk Control Signal B	L.L	Start of Cleaning
bF-	Backflush	1.L	Successful Cleaning

If Milking is Blocked (display shows **STOP** or -nF- ) due for example to an animal being Dry or has Antibiotics then press the OK key to acknowledge the warning and then press the START key once more

To enter a cow number e.g. Cow 55



To enter a cow number at another stall e.g. Cow 55 at Place 3

